

Loctite® Dual Cartridge Manual Applicator 300 ml. Part Number 1093981

Instructions for Dual Component Manual Applicator.

1. Press thumb release plate and pull back push rods to their home position.




2. Home position is the farthest point back. Release thumb release plate and rods will lock in their home position.



3. Load rear of cartridge first by positioning appropriate push disk to the proper size of the 1:1 or 2:1 mix material that you are using. Rear of cartridge will snap into the black plastic support plate grooves.




4. Drop front end of cartridge down in the cradle and squeeze trigger.

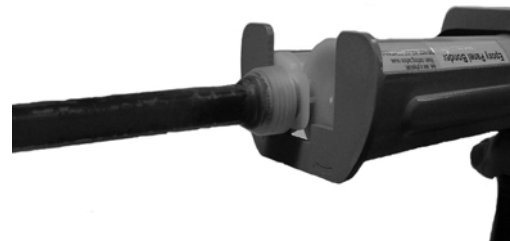


Maintenance Instructions

1. After every use, always clean off any material before it has time to cure.
2. To ensure optimum performance, pins in the handle should be lubricated with oil (WD40 or comparable) after every 10 cartridges.

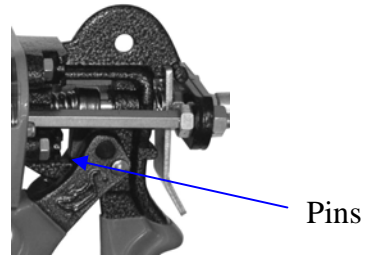

Instructions for Dual Component Applicator Conversion for 300ml x 150ml cartridges (2:1).

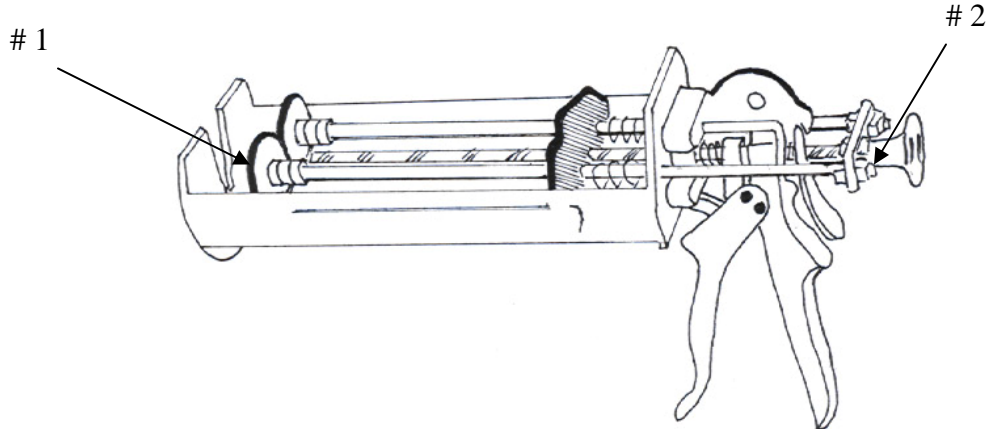

1. Remove Push Disk (#1).
2. Make sure rods are pushed forward all the way.
3. Using a wrench, remove nut (#2)
4. Depress thumb release and retract knob.
5. Shift rod over to hole closer to center.
6. Reinsert rod into release plate through hole closest to center.
7. Retighten nut.
8. Retract rods.
9. Attach smaller push disk to rod.

Henkel Corporation
1001 Trout Brook Crossing
Rocky Hill, CT 06067-3910

Henkel Canada Corporation
2225 Meadowpine Boulevard
Mississauga, Ontario L5N 7P2

Henkel Capital, S.A. de C.V.
Calzada de la Viga s/n Fracc. Los Laureles
Loc. Tulpetlac, C.P. 55090
Ecatepec de Morelos, Edo. de México

**Henkel Automotive
Technology Center**
2455 Featherstone Road
Auburn Hills, Michigan 48326

Henkel Ltda.
Rua Karl Huller, 136 – Jd.
Canhema 09941-410
Diadema/SP, Brazil

www.loctite.com

Loctite is a trademark of Henkel Corporation, U.S.A. © Copyright 2004. Henkel Corporation
All rights reserved. Data in this operation manual is subject to change without notice.
Manual P/N: 8901464, Date: 09/2007

