
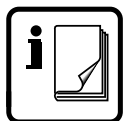
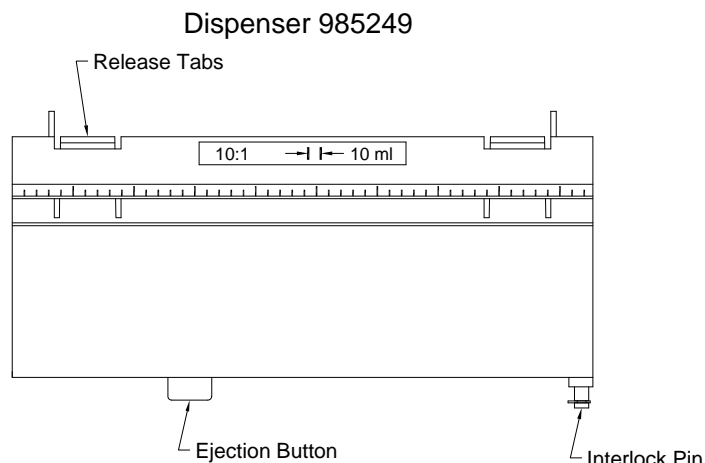


Cartridge Tray Replacement / Conversion Instructions

Equipment Instructions

1. With the plunger retracted, release tabs which hold the cartridge tray in place.
2. Remove cartridge tray.
3. Insert replacement cartridge tray with the cartridge ejection button towards the nozzle end of the dispenser. Snap tabs into place. For pneumatic models, metal interlock pin must be located over trigger.
4. Replace plunger buttons: with appropriate screwdriver or allen wrench, remove center screw from plunger button. Replace button. Replace screw.

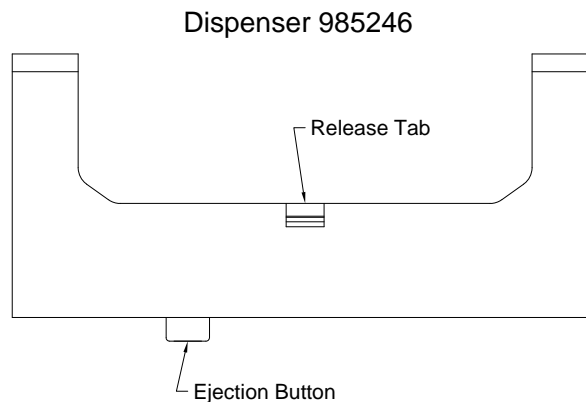

Henkel Corporation

One Henkel Way
Rocky Hill, CT 06067-3910
USA

Henkel Capital, S.A. de C.V.

Calzada de la Viga s/n Fracc.
Los Laureles
Loc. Tulpetlac, C.P. 55090
Ecatepec de Morelos, MEXICO

Henkel Loctite Korea

8F, Mapo Tower, 418,
Mapo-dong, Mapo-gu,
Seoul, 121-734, KOREA

Henkel Canada Corporation

2515 Meadowpine Boulevard
Mississauga, Ontario L5N 6C3
Canada

Henkel Singapore Pte Ltd

401, Commonwealth Drive
#03-01/02 Haw Par Technocentre
SINGAPORE 149598

Henkel Japan Ltd.

27-7 Shin Isogo-cho, Isogo-ku
Yokohama, 235-0017
JAPAN

Henkel Corporation

Automotive/ Metals H.Q.

32100 Stephenson Hwy,
Madison Heights 48071
USA

Henkel (China) Company Ltd.

No. 928 Zhang Heng Road,
Zhangjiang, Hi-Tech Park, Pudong,
Shanghai, China 201203

Henkel AG & Co. KGaA

Standort München
Gutenbergstraße 3
85748 Garching b. München
Deutschland

www.equipment.loctite.com

® and ™ designate trademarks of Henkel Corporation or its affiliates. ® = registered in the U.S. and elsewhere. ©
Henkel Corporation. All rights reserved. Data in this operation manual is subject to change without notice.
Manual P/N: 985293, Rev A, Date: 06/16/2014