

Loctite® 4:1 Tray Conversion Kit Instructions

Part Numbers: 984210 & 984211


1. With the plunger retracted, release tabs which hold the cartridge tray in place.

2. Remove cartridge tray.


3. Insert replacement cartridge tray with the cartridge ejection button towards the nozzle end of the dispenser. Snap tabs into place. For pneumatic models, metal interlock pin must be located over trigger.

4. Replace plunger buttons: with appropriate screwdriver or Allen wrench, remove center screw from plunger button. Replace button. Replace screw.

DISPENSER 983438

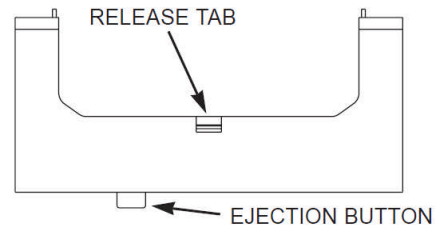

DISPENSERS 983436, 983437, 983439

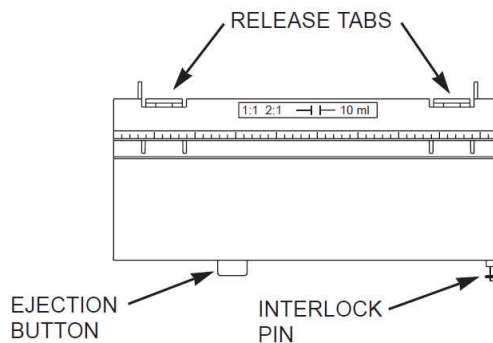

Henkel Corporation
One Henkel Way
Rocky Hill, CT 06067-3910

Henkel Canada Corporation
2515 Meadowpine Boulevard
Mississauga, Ontario L5N 6C3
Canada

Henkel Capital, S.A. de C.V.
Calzada de la Viga s/n Fracc. Los Laureles
Loc. Tulpetlac, C.P. 55090
Ecatepec de Morelos, Edo. de México

Henkel Corporation
Automotive / Metals HQ
32100 Stephenson Hwy.
Madison Heights, MI 48071

Henkel Ltda.
Rua Karl Huller, 136 – Jd.
Canhema 09941-410
Diadema/SP, Brazil

www.loctite.com

® and ™ designate trademarks of Henkel Corporation or its affiliates. ® = registered in the U.S. and elsewhere. © Henkel Corporation, 2009. All rights reserved. Data in this operation manual is subject to change without notice.
Manual P/N: 983762, Rev A, Date: 04/29/2013